

HAND TRUCK MAINTENANCE SCHEDULE



B&P MANUFACTURING
Engineered Delivery Products



Liberator

In order to ensure that your Liberator hand truck gives years' worth of trouble-free service, we highly recommend performing the following preventative maintenance steps in order to assure safety and performance:

DAILY:

- ▶ **CHECK** tire pressure.
- ▶ **VISUALLY** inspect for damage.
- ▶ **TEST** proper operation of brakes.

WEEKLY:

- ▶ **CHECK** the tightness of the nose plate fasteners.
- ▶ **CHECK** the tightness of handle fasteners.

MONTHLY:

- ▶ **CHECK** tires for cracks or delaminating.
- ▶ **INSPECT** frame rivets.
- ▶ **INSPECT** welded joints for bending or cracks.
- ▶ **INSPECT** wheel bearings for noise and run out.
- ▶ **INSPECT** axle cotter pins.
- ▶ **ADJUST** brakes if needed.

ANNUALLY:

- ▶ **POWER** wash your hand truck.
- ▶ **INSPECT** wheel bearings and axles for wear.
- ▶ **CHECK** brake pads and brake shoes for wear and excessive movement.
- ▶ **GREASE** wheel bearings.



bpsales@bpmfg.com



(800) 334-7141



bpmfg.com

